



HOFFBERGER 153



Powering on Projection System

- On the projector remote push the **RED** button in the upper left hand.
The projector will power on within a few seconds.

Selecting Laptop

- If your laptop is equipped with a VGA port plug the provided cable marked laptop into the VGA port. **If your laptop does not have a VGA port, you must bring an appropriate adapter in order to project your screen.**
- Plug the audio cable into your laptop audio port to play audio from your laptop.
- On the projector remote push the **COMPUTER** button until you have selected **COMPUTER 1** as the source.



Selecting DVD Player


- On the projector remote push the **VIDEO** button until you have selected **VIDEO** as the source.
- Use the DVD remote to operate the player.

Adjusting Volume

- On the projector remote push the **VOLUME** button and the corresponding plus or minus buttons to adjust volume.

Powering down Projection System

- After use **PLEASE POWER DOWN** the projection system by pressing the power button in the upper left hand corner twice.

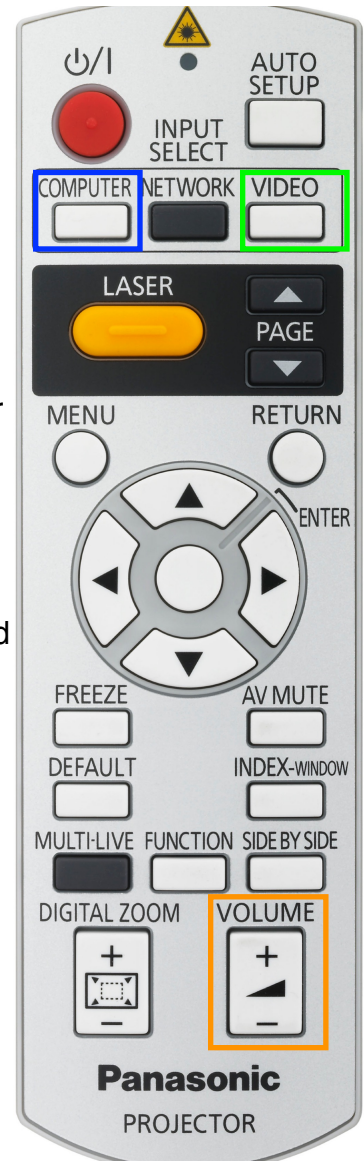

**Be Green. Conserve Power & Projector Lamps.
Power off When Not in Use!**

**For Issues Pertaining to the Projection System Please Call the
Classroom Emergency Line 410-337-3290
All Other Inquires Must Be Reported to helpdesk@goucher.edu**