

KRAUSHAAR 204



Powering on Projection System

- On the control panel press the **ON** button underneath **DISPLAY**. **The projector will power on within 60 seconds. Button pad will blink until the projector has been properly warmed up.**

Selecting Wall Plate

- If your laptop is equipped with an **HDMI port**, plug the provided cable into the HDMI port on your laptop and plug the other end of the cable into the wall plate port labeled **HDMI IN**. After that press the button labeled **WALL PLATE** to project an image and play sound from you laptop.
- If your laptop is equipped with a **VGA port only** you may use the provided VGA cable and subsequent VGA and audio port on the wall plate. Plug the cable into your laptop's VGA port and the audio cable into your audio port. Press **WALL PLATE** on the control panel to display an image and play sound from your laptop.
- **If your laptop does not have an HDMI or VGA port, you must bring an appropriate adapter in order to project your screen.**

Selecting Document Camera

- After powering on projector press and hold the power button (button with blue ring) on the document camera to power on.
- After powering on document camera press the button labeled **DOC CAM** to display an image from the document camera. (Power down document camera after use by pressing and holding the power button.)

Selecting CD Player

- After powering on the projector press the button labeled **MEDIA PLAYER**.
- Located in the black cabinet you'll find the CD player. Use the controls on the front of the CD player or the remote located on the door of the cabinet.



Selecting Auxiliary Port

- After powering on the projector press the button labeled **AUX**.
- Located in the cabinet is a 3.5mm audio cable. Connect one end to your device's audio port and the other end to the 3.5mm wall plate.

Wireless Display

- On the control panel press the **WIRELESS** button and refer to the set of instructions located on the wall for quick start. For advanced features you must visit www2.mersive.com/solstice-user-guide/ or schedule an appointment with the Help Desk **prior to your scheduled meeting or class.**

Adjusting Volume

- On the control panel turn the knob located under **VOLUME** to adjust the level of volume.

Muting Sound & Image

- To mute sound and image from either source press the **MUTE** button. To un-mute press the **MUTE** button again.

Powering down Projection System

- After use **PLEASE POWER DOWN** the projection system by pressing the **OFF** button located under **DISPLAY**.

Be Green. Conserve Power & Projector Lamps.
Power off When Not in Use!

For Issues Pertaining to the **Wired Projection System** (No Connection, No Sound) During Lecture Time Please Call the Classroom Emergency Line 410-337-3290
All Other Inquires Must Be Reported to helpdesk@goucher.edu