



## MEYERHOFF 105



### Powering on Projection System

- Under **DISPLAY** push the **ON** button to power on the projector. Wait approximately 14 second for system to warm up before proceeding to the next step.

### Selecting iMac

- After powering on projector push the **PC** button to display an image and play audio from the iMac.

### Adjusting Volume

- To adjust volume push the **Volume Down** or **Volume Up** button.

### Muting Image & Audio

- To mute the sound and image from the projector select **MUTE**.
- If upon turning on projection system and no image or audio is being produced please check to make sure **MUTE** is not selected.



### Powering down Projection System

- After use **PLEASE POWER DOWN** the projection system by selecting **OFF**.

### If You Need to a DVD Drive to Play Other Media

- Please contact the IT Help Desk and arrange a time to check out a **USB DVD Drive**.
- See attached instructions on how to use the **USB DVD Drive**.

Be Green. Conserve Power & Projector Lamps.  
Power off When Not in Use!

For Immediate Assistance Call the Classroom  
Emergency Line

410-337-3290 or dial 3290

For Information on Specialized Classrooms or Classroom  
Walkthrough Contact the Help Desk

[helpdesk@goucher.edu](mailto:helpdesk@goucher.edu)